


HGV Service Team

Internal Use

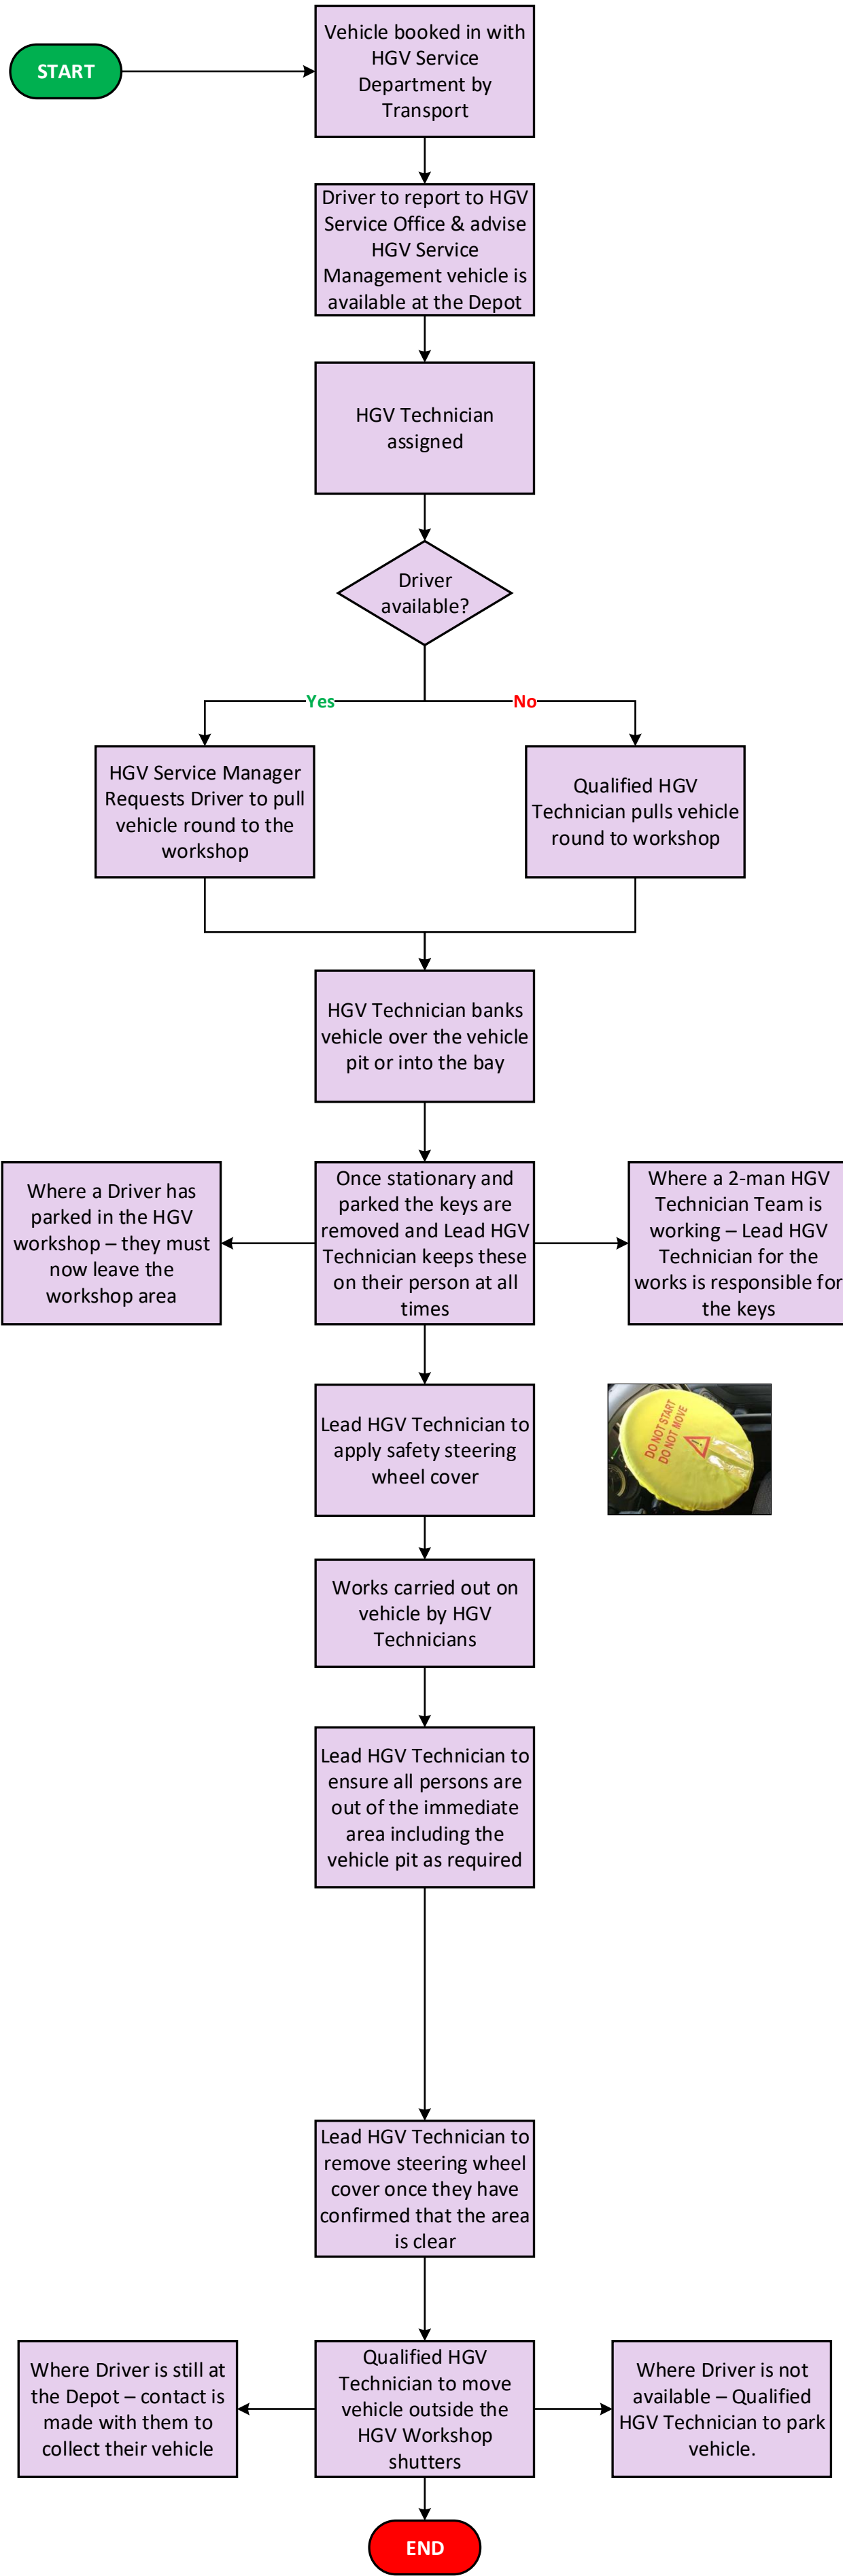

Communication must be maintained in the HGV Workshop at all times and throughout the entire work activity

Lead HGV Technician is appointed for the work by the HGV Service Management Team



Should the engine be required to be started for the work activity – Lead HGV Technician must ensure that they are in control of the keys. The steering wheel cover must not be removed until the vehicle is ready to be moved.

AT NO POINT ARE NON HGV PERSONNEL PERMITTED IN THE WORKSHOP UNLESS DELIVERING THE VEHICLE UNDER INSTRUCTION

This document is held electronically as a controlled copy – Printouts are for reference and valid only on the day of print